


FOLLOW THESE SIMPLE INSTRUCTIONS FOR EASY INSTALLATION OF YOUR ACCORDION SKIRT

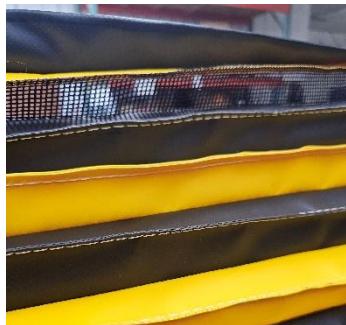

1. MEASURE LENGTH AND WIDTH OF TABLE PLATFORM.


2. DETERMINE TOP OF SKIRT.

Locate the mesh-style fold which is near the top of the skirt.

3. MEASURE SKIRT PERIMETER AND DETERMINE COLLAR STYLE.

Example: If the platform is 48" x 72" and the outside (A) perimeter of the bellows is 48" x 72", the first piece of fabric or collar and the bottom pocket will be sewn on the outside of the bellows, and all the folds will be under the table. See A Table Mount.

If the platform is 48" x 72" and the inside (B) perimeter of the bellows is 48" x 72", the first piece of fabric or collar and the bottom pocket will be sewn on the inside of the bellows, and all the folds will fall out beyond the table. See B Table Mount.

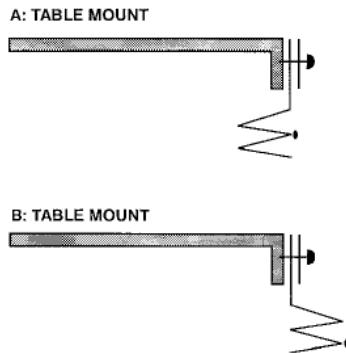

4. RAISE THE TABLE TO COMFORTABLE WORKING LEVEL.

5. PREPARE TABLE AND HARDWARE.

Hardware is a flat bar about 1" wide x 11 gauge. Custom Faberkin offers pre-cut to size mounting hardware and self-tapping screws for installation. The flat bar has pre-drilled holes about every 12 inches. If you opted to provide your own mounting hardware, follow the below steps.

Cut 2 pieces of hardware the same length as table and 2 pieces of hardware the same width as table.

Then drill holes in hardware and table flange spaced about every 10" to 12" for fasteners. (Fasteners can be such as: pop rivets, bolts & nuts, tek screws, etc.) Determine the size of hole by the size of the fastener.





5a. When attaching the skirt to the table with hook and loop, first **CLEAN THE SURFACE OF THE TABLE FLANGE OF ALL OIL AND DIRT**. The loop is sewn on the collar of the skirt. To attach the pressure sensitive hook, peel the back and press onto the table flange. Then press the hook & loop together.
Note: Do not use hook & loop if temperature is below 65 degrees.

6. **SLIP GUARD (WITHOUT WIRES) OVER THE TOP OF THE TABLE.**
With guard on the floor, square up the guard to the table top, matching short sides and long sides.



7. **ATTACH THE SKIRT TO THE TABLE.**
Starting at one short side of the table, attach one short side of skirt by pinching the collar and the tail of the inside lifting web between the outside of the table flange and one short piece of hardware and fasten through all three. Most fasteners will go through the collar without having to drill holes in the fabric collar.

Moving clockwise around the table, mount corresponding skirt collars to the table using the same procedure as above.

8. **MEASURE AND SORT WIRES FOR THE APPROPRIATE WIRE POCKETS.**

The wire will be 4" to 5" shorter than the pocket they will go into.
Example: If the side is 48" long, the wire will be 43" to 44" long.

9. **INSERT WIRES INTO WIRE POCKETS.**

Starting with the top wire pocket, have one person push the wire in with a pair of pliers and the other person hold the opposite end of skirt level. Insert one wire into each pocket. If the wire does not slide in easily, apply a lubricant to the wire before inserting.

Raise table to expose compressed folds as needed to insert wires.



10. **RUN TABLE UP AND DOWN TWICE** to determine if skirt is folding properly and there is no fabric pinching in the scissors or anywhere else.

11. **INSERT WEIGHT INTO BOTTOM POCKET OR ATTACH BOTTOM POCKET TO BASE FRAME OR THE FLOOR.**

Use the same type of flat bar as you did to mount to the top.

